



**Analogue Addressable
Fire Control Panel**

For

Apollo XP95 & Discovery Protocol

V3.0 and above

Operating Manual



MVEC-02 Issue 2.0 July 2006

NOTE

PLEASE READ THIS MANUAL BEFORE
HANDLING THE EQUIPMENT
AND OBSERVE ALL ADVISE
GIVEN IN IT.

THIS PARTICULARLY APPLIES
TO THE PRECAUTIONS NECESSARY
TO AVOID E.S.D

CONTENTS.

Introduction	5
Product Overview	7
Control Panel	9
Panel Indicators	11
Keypad	13
LCD Display	14
Menu and Control Functions	15
Function Buttons.....	15
Access Levels.....	16
Menu Flow Chart.....	18
Key to Menu.....	19
Disablement Flow Chart.....	20
Engineering Options	22
System Operation	23
Fire Alarm.....	23
Silencing the Alarm.....	24
Resetting the System.....	24
Evacuate.....	25
Panel Buzzer.....	25
Fault Conditions.....	26
Fault Messages.....	27
Action after a Fire.....	28
Action after a False alarm.....	29
Action following a Fault.....	29
Avoiding false Alarms.....	30

CONTENTS (Continued)

- System Information.....31**

- Fire procedures..... 32**

- Log Book33**

- Event Data34**

- Routine Testing 39**
 - Daily.....39
 - Weekly..... 39
 - Monthly.....40
 - Quarterly.....40
 - Annual.....41

- Electrical Specification.....42**

- General Specification.....43**

INTRODUCTION

The Vector is a multi loop, analogue/addressable fire alarm control panel equipped with up to 64 zones. It has been designed in accordance with European standards EN54-2 and EN54-4 Fire Detection and Alarm systems—Control and Indicating Equipment.

It utilises the latest surface mount technology with a flash programmable 16 bit Micro-controller for easier software updates

It operates with the Apollo XP95 & Discovery protocol and supports the Apollo range of field devices. Two internal sounder circuits are provided per loop and additional sounder circuits can be connected to loop wired modules.

The control panel is programmable via the keypad controls or via a PC, allowing the configuration to be created off-site and downloaded.

In addition to the requirements of EN54-2 the control panel has the following facilities:-

Test Condition, to allow the automatic resetting of zones in alarm for testing purposes. EN54-2 Section 10 option with requirements.

Fire Alarm Devices, to enable an audible warning to be sounded throughout a premises upon the detection of a fire condition or the operation of a manual call point. EN54-2 Section 7.8 option with requirements.

In addition to the requirements of EN54-2, all control panels have voltage free relay contacts for fire and local fire which operate upon fire condition. These are to be used for local control and signalling.

The Vector has individually isolatable panel contacts via the menu with an Auto enablement feature and the option to remove all disablements. The menu is comprehensive, yet easy to use, allowing electrical isolation of the loop via the keyboard. The menu includes an enhanced test mode, with or without sounders allowing all zones to be tested simultaneously if required.

It has a real time clock, with back up, utilising a smart cap rather than a battery, thus eliminating battery life issues.

The Vector incorporates a very fast auto learn sequence only learning selected parts of the loop, and if required can unlearn devices from the system.

It supports the new Apollo ancillary base sounders and relays, local, zonal or common operation.

A device monitoring mode allows activation of the device outputs and control of the loop polling direction. Also there is a selectable maintenance scanning threshold.

The Vector has genuine peer to peer 16 panel networking, utilising reliable CAN bus technology, with response settings to evacuate, 1st alarm, 2nd alarm, precinct and fault signals, with programmable responses for loop sounders, panel sounder circuits, remote relays and loop modules.

This User's manual is supplied with the control panel which in addition to explaining the operation of the panel, incorporates a log book and details of the user's responsibilities for testing and maintaining the system. It is intended that the user's manual forms part of the documentation package passed to the customer on completion.

PRODUCT OVERVIEW

The control panel is a 1 - 4 loop, 64 zone analogue/addressable unit with integral power supply and space for a standby battery. It has two sounder circuits per loop, auxiliary volt free contacts and various remote inputs and outputs.

The control panel comprises a sheet steel enclosure suitable for wall mounting with a hinged, lockable front access door. It can be semi-recessed if required by using a suitable flushing bezel. Cable entry is via the top or rear of the cabinet. 20mm 'knockouts' are provided in the top and in the rear.

A separate key fits the door lock and the 'control enable' key switch. A 2 x 40 character, backlit LCD is fitted to display event information and function and configuration menus. Alarm and status information is provided by LED indicators and there is a 12 button keypad which controls the system and allows access to the function and configuration options.

The control panel operates with the Apollo protocol and supports the XP95 & Discovery detection devices. The full range of detectors, sounder controllers, I/O modules, conventional zone monitors, etc can be incorporated into the system. In addition to the 64 fire zones, there are three further options Alarms, Contacts and Inputs, which have special functions enabling auxiliary devices to be configured for alternative operation, also four groups are provided for cause and effects configuration.

It is possible to power the panel from a remote power supply if required and input terminals are provided to facilitate the remote supply input and also to monitor the unit for mains and battery failure.

Access to the panel functions and configuration options is at different levels enabling restricted access to certain functions. At the user level it is possible to disable parts of the system, set the time and date, put the system into walktest mode and view the system status. Advanced options include configuration, maintenance checks and fault finding mode.

The control panel incorporates an 'auto-learn' feature which enables the system devices to be recognised on initial power up. Configuration of the system operation can be achieved via the panel controls or by downloading data created in a PC software program.

GLOSSARY

Address

An address is the unique identification applied to each field device in an addressable system

Addressable system

An addressable system is one where each field device has an address which can be identified and displayed in an abnormal condition or for normal monitoring purposes. The address is normally accompanied by a user-defined text message describing the device location, e.g. 'First floor corridor'. Addressable devices are usually wired in a loop configuration.

Analogue/addressable system

In addition to device addressability, the detectors employed are analogue devices transmitting data to the control panel which is then analysed and processed so that the appropriate condition can be displayed. Analogue systems can provide greater immunity to false alarms and give advance information about impending fire conditions.

Automatic system

An automatic system is one which includes detectors of some description, as opposed to one fitted with manual call points only.

Device

A component of an addressable system connected to the loop circuit. It can be an input device such as a detector or call point, or an output device such as a relay or sounder controller. Devices in an addressable system are uniquely numbered and there is a finite number which can be connected to a single loop.

Detector

A device which detects either flame, smoke or heat. Analogue detectors are often referred to as sensors because of their ability to transmit variable data to the control panel.

Disabled

The condition of the system when part or parts of it have been isolated for any reason. It is possible to disable individual addresses, complete zones and/or remote outputs. The normal condition is 'enabled'.

Field device

See Device

Fire procedure

A written procedure describing the actions to be taken in the event of a fire alarm. Procedures should also include the actions required after a fire and in a fault condition. All staff should be conversant with the fire procedures.

GLOSSARY(Continued)

Input/output (I/O) device

A device which either monitors a remote function or provides a signal to control a remote function, or both. Used with analogue/addressable systems to interface with other services. Each I/O unit has an address.

Loop

The method of wiring an addressable or analogue/addressable system whereby the circuit connecting the devices is wired from the panel and is returned to the panel to form a loop. With this method a break in the loop circuit, although indicated as a fault, does not disable the operation of any devices.

Manual call point (MCP)

Also known as a break glass unit, initiates a fire alarm condition when activated. MCPs comprise a standard call point assembly fitted with an input module on analogue/addressable systems, and have a unique address.

Sensor

See Detector

Short circuit isolator (SCI)

A device connected to the loop circuit which limits the loss of devices in a short circuit condition. They are generally fitted between each zone to restrict the loss of detection to one zone in accordance with BS 5839 Part 1. SCIs do not have an address and do not limit the number of devices on a loop.

Sounder

A device which provides an audible warning of a fire alarm condition. Sounders may be bells but are often electronic devices with a range of sound options and volume control. In most systems the sounders must achieve a minimum level of audibility throughout the protected premises.

System type


Systems complying with BS 5839 Part 1 are classified depending on the application. There are two main categories, i.e. Life Protection (L type) and Property Protection (P type). Each category is sub-divided depending on the level of protection required for the particular risk.

Zone

A zone is the sub-division of a building separated by fire resisting walls to form a compartment. When applied to a fire alarm control panel it refers to the number of fire indicators available to identify the location of a fire within a building. Each fire compartment generally comprises one or more zones. Each floor of a multi-storey building is a separate zone, and each vertical structure (staircase, liftshaft, etc.) is a separate zone. Smaller zones may be required in areas of high risk. In an analogue/addressable system the zonal indicator denotes the general area of the fire whilst the LCD indicates the actual activated device.

VECTOR 1. CONTROL PANEL

Panel Controls.

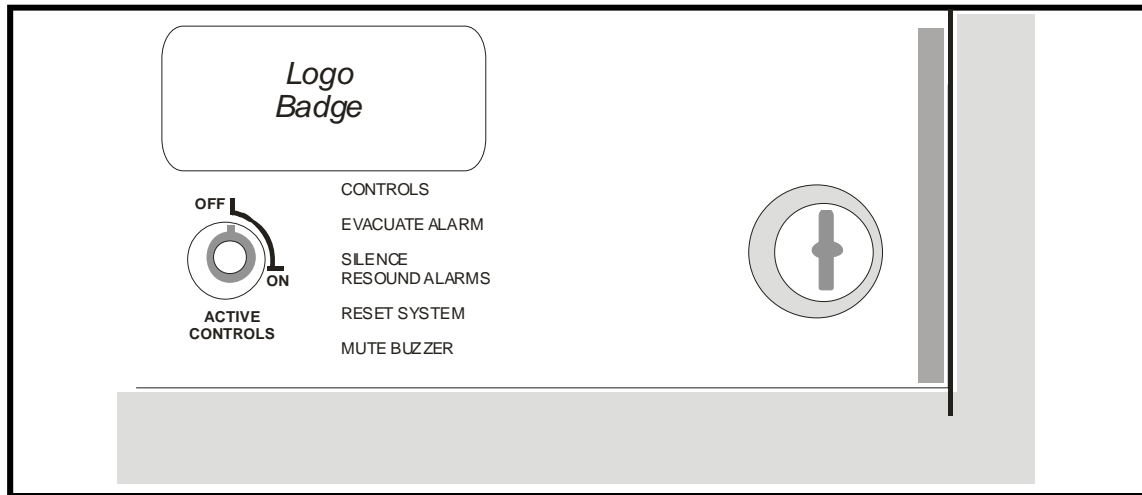

Key switch - Activate Controls.

This Key switch is normally in the OFF position with the key withdrawn and stored where it can be accessed by authorised personnel in the event of an alarm or fault. In the OFF position none of the functions are operable, even though the system is completely operational. with the exception of the “mute buzzer” key, scroll [2] [8] and [5] if an alarm should be present. This is to enable viewing of the event text if no key is available.

If the keyswitch is turned to the ON position then the keypad becomes fully functional.

NOTE : It is not possible to withdraw the key in the ON position.

Key lock.

This allows authorised engineering personnel access to the inside of the control unit.

WARNING : The power to the alarm unit should be isolated before gaining access. The voltages in this unit are high enough to cause severe injury.

VECTOR 1. CONTROL PANEL (Continued)

General description

The control panel comprises a sheet-steel wall mounted enclosure with a lockable hinged door. All the user controls and indicators are mounted on the fascia of the unit - there are no user controls within the panel.

Normal Operation

In the normal operating mode only the green Supply Healthy LED (light emitting diode) should be illuminated. The LCD (liquid crystal display) should be showing the current time, date and company name, if programmed.

Fire Alarm Event

A fire alarm event is caused by the activation of a field device. It may be generated automatically by a smoke or heat detector sensing smoke or heat, or manually by the operation of a call point. In either case it will cause an audible alarm to be given (usually throughout the building) and the event details to be displayed and indicated on the control panel.

NOTE . Each system is individually configured for the required operation. Space is provided in the manual to record the method of operation of this system, which should be completed by the installer.

The prescribed emergency fire alarm drill should commence immediately the alarm is heard (see System Operation)


Fault Event

A fault event is generated when the control panel detects an internal malfunction or a fault on an external circuit or device. A fault is indicated by the relevant LED/s and the buzzer sounding. A fault description is shown on the LCD.

Control Event

A control event is caused by the operation of one or more of the keyboard pushbuttons. All controls are inoperable until the 'Controls' keyswitch is set to the 'on' position, to prevent unauthorised operation. A keypad is provided to silence and reset the system following a fire or fault event, initiate an evacuation alarm, and to access the menu functions.

PANEL INDICATORS

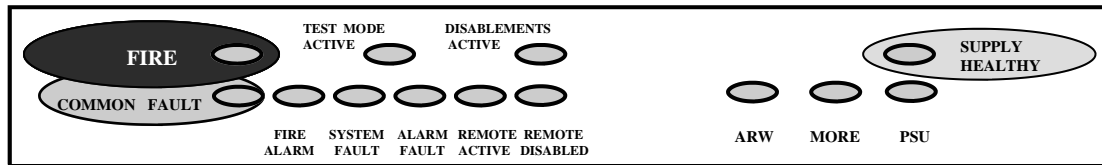

Fire

Indicates the presence of a Fire Alarm signal or an Evacuate command.

Test Mode Active

Indicates system is in the Engineers Test mode, with limited operational capabilities.

Disablement Active

Indicates that part of the system is disabled (isolated)

Supply Healthy

Indicates that the Mains or Battery supply is present.

Common Fault

Indicates that a fault is present on the system. The LCD will show the details.

Pre-Alarm

Indicates that a detector has recorded a higher than normal analogue value which could signal an impending fire condition.

System Fault

Indicates that the processor has halted. This can only be reset by an engineer.

Alarm Fault

Indicates a fault on the alarm circuit.

PANEL INDICATORS (CONTINUED)

Remote Active

Indicates that the Remote output relay has been activated.

Remote Disabled

Indicates that the Remote output relay has been isolated for maintenance or testing.

ARW

Auto Reset Warning. Indicates processor has automatically re-started. Must be reset by "Reset System" Key 9 on keypad.

More

Indicates that there are more events

PSU

Indicates power supply failure. The LCD will show the details.

 









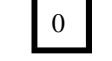 
 

Fire Detection Zones

Sixteen indicators (Zones 1-16) to show which area (group of devices) has activated in a fire condition.

KEYPAD



All the numbered keys are digits in their own right but also have the following additional functions :-

-  Test button for lamps, panel sounder and LCD.
-  Scroll Up. (available when keyswitch 'Off' in alarm)
-  Generate full Alarm (Evacuate)
-  Scroll Left
-  Select to View Option. (available when keyswitch 'Off' in alarm)
-  Toggle Silence/ Resound Alarm
- 
-  Scroll down (available when keyswitch 'Off' in alarm)
-  System Reset
- 
-  Access to Menu
-  (Bottom Right)
-  Mute Internal Buzzer
(available when keyswitch 'Off')

LCD DISPLAY

The LCD displays event information, status information, and the option menus. It has two lines of text, each with 40 characters, and is backlit when there is an active event on the system or the menu options are accessed. In the normal operating mode the backlight is off and the top line displays a default text message or user-defined text. The second line displays the current time and date, e.g.

VECTOR 1
SYSTEM NORMAL 9:36 15/03/04

When an event occurs, the backlight is activated and the LCD shows the event details, e.g.

FIRE	PANEL 01	ZONE 001	1 OF 1
TYPE MAN	ADDRESS 003	18:20	23/03

The display shows the event type, i.e. Fire, the zone that the activated device is in, i.e. zone 3, the address number of the activated device, i.e.002, the device type, i.e. manual call point, and the number of events, i.e. 1. Pressing button **[5]** reveals the device location text. This button will function regardless of status of keyswitch.

NOTE : Fault conditions on the system are suppressed when Fire events are present. The **SYSTEM FAULT LED** is illuminated and faults can be viewed if required via the 'View Active Faults' option - when button **[5]** is pressed.

NOTE:- Subject to keyswitch for faults

The bottom line displays a text message describing the device location.

In the engineering mode, menu options are displayed as follows:

SELECT MENU OPTION
5 – SET CLOCK

The Keypad is used to navigate through the menu options and select functions as described in the commissioning manual.

MENU AND CONTROL FUNCTIONS

General

The control panel incorporates facilities to alter the status of the system, e.g:- it is possible to isolate parts of the system if there is work in progress, or a particular device is faulty and causing unwanted alarms. The system can be put into test mode to allow an engineer to activate devices without causing a general alarm, and the time and date can be changed, e.g. for British Summer Time.

These functions are accessible to the user at access level 2 but care should be exercised when utilising the functions as it is possible to disable some or all of the system. It is recommended that before attempting to enter the options menu the features are fully understood, and the operator is familiar with the controls used to navigate the menus and select options.

Function buttons

Four of the keypad buttons are used as function buttons when the options menu is invoked.

Most of the panel functions, including configuration, are controlled by these buttons which have the following functions:-

MENU .

The Menu button is used to initially invoke the options menu. Press once to enter the Menu , and press again to Exit.

2 and **8**

The 2 and 8 buttons are used to “toggle” select the Menu options. Once having selected an option, then to escape, the Menu button should be pushed again.

5

The 5 button on the keypad is pressed when the option selected needs to be viewed, or to view the text or an active event.

4 and **6**

The 4 and 6 buttons are used to position the cursor along a full display line in order to adjust various options available.

MENU AND CONTROL FUNCTIONS (Continued)

Access levels

To prevent unauthorised operation of the panel controls and functions, access is restricted in accordance with the requirements of EN54 -2.

The following access levels apply:-

- Level 1** Full restrictions. The internal buzzer MUTE only is available at this level and Scroll and Select if 'Fire' is active.
- Level 2** CONTROL keyswitch ON. The control switches are operable and limited menu functions available.
- Level 3** An access code must be entered to gain access to the configuration and advanced options.
An additional access code must be entered in order to set the Disablements and to activate the Test Mode.
- Level 4** Configuration software. Download facilities are available for off-site programming.

NOTE :- Amending the system configuration can have serious effects on the operation of the equipment and should only be undertaken by a competent person who has information concerning the devices installed and the specified operational requirements.

The system should be fully tested after any alterations to the configuration program.

Level 2 Options Menu.

1. View active faults.
2. View active disablements.
3. View/Clear event Logs.
4. Set disablements.
5. Set Clock.
6. Activate test mode.
7. Engineering options.

MENU AND CONTROL FUNCTIONS (Continued)

Menu Procedures.

The following procedures are common to all of the menu options and should be understood before attempting to alter the system status.

To access the Options Menu the CONTROLS key switch must be in the ON position.

Press the **MENU** button on the KEYPAD to display the following :-

*** SELECT MENU OPTION ***
1. VIEW ACTIVE FAULTS

Use the **2** and **8** keypad buttons to toggle (scroll) to the required option, then press **5** to display the required information.


At any time, pressing **MENU** again will return you to the menu options, or in some cases return you to the last step.

Depending on the option selected, there will be sub-menu items which can be accessed by the **5** key or scrolled across to, using the **4** and **6** keypad buttons.

When satisfied with the data obtained, press menu to return to the initial screen.

MENU AND CONTROL FUNCTIONS (Continued)

Menu flow chart.

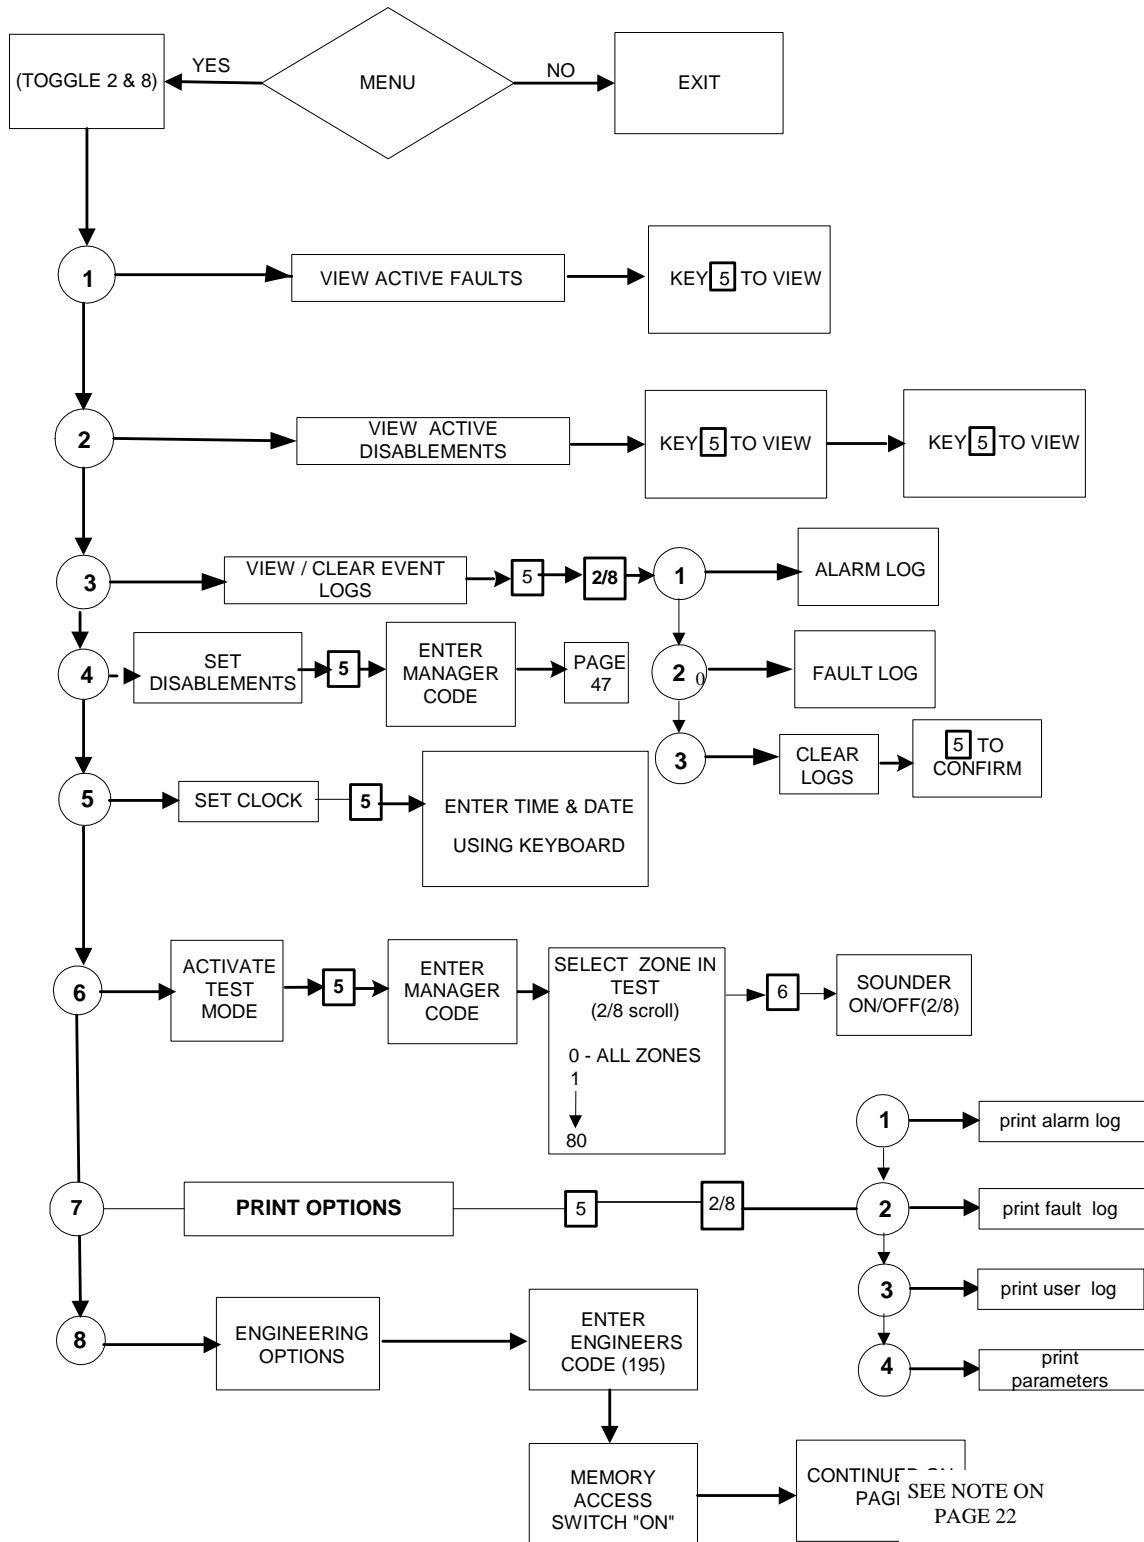

MENU AND CONTROL FUNCTIONS (Continued)


Key to menu.

1. **View active faults.**
This option provides a method of viewing faults on the system when there are active fire events present.
2. **View active disablements.**
This option allows the user to identify parts of the system that have been isolated.
3. **View / Clear event logs.**
This option allows the Alarm log and the Event log to be inspected and if required can be cleared.
4. **Set disablements.**
This option allows remote outputs, sounders, loop and zones to be disabled and also enabled manually or automatically at a preset time and date.
An optional managers code can be used to allow access to this function.
5. **Set clock.**
Allows the time and date to be entered via the keypad.
6. **Activate test mode.**
Allows zones to be tested individually or all together. With or without sounder.
An optional managers code can be used to allow access to this function.
7. **Engineering options.**
This option requires a security code to be entered before allowing entry.

Allows the system to automatically “learn” new devices..
To connect to a PC
To set panel parameters.
To set system parameters.
To monitor individually the device response, change loop poll direction and activate the device outputs.
To perform a maintenance check, set a threshold and list all devices within this threshold.
To set a Management access code to restrict access to the 'Set Disablements' option and the 'Activate Test Mode' facility.

MENU AND CONTROL FUNCTIONS (Continued)

4. Set Disablements

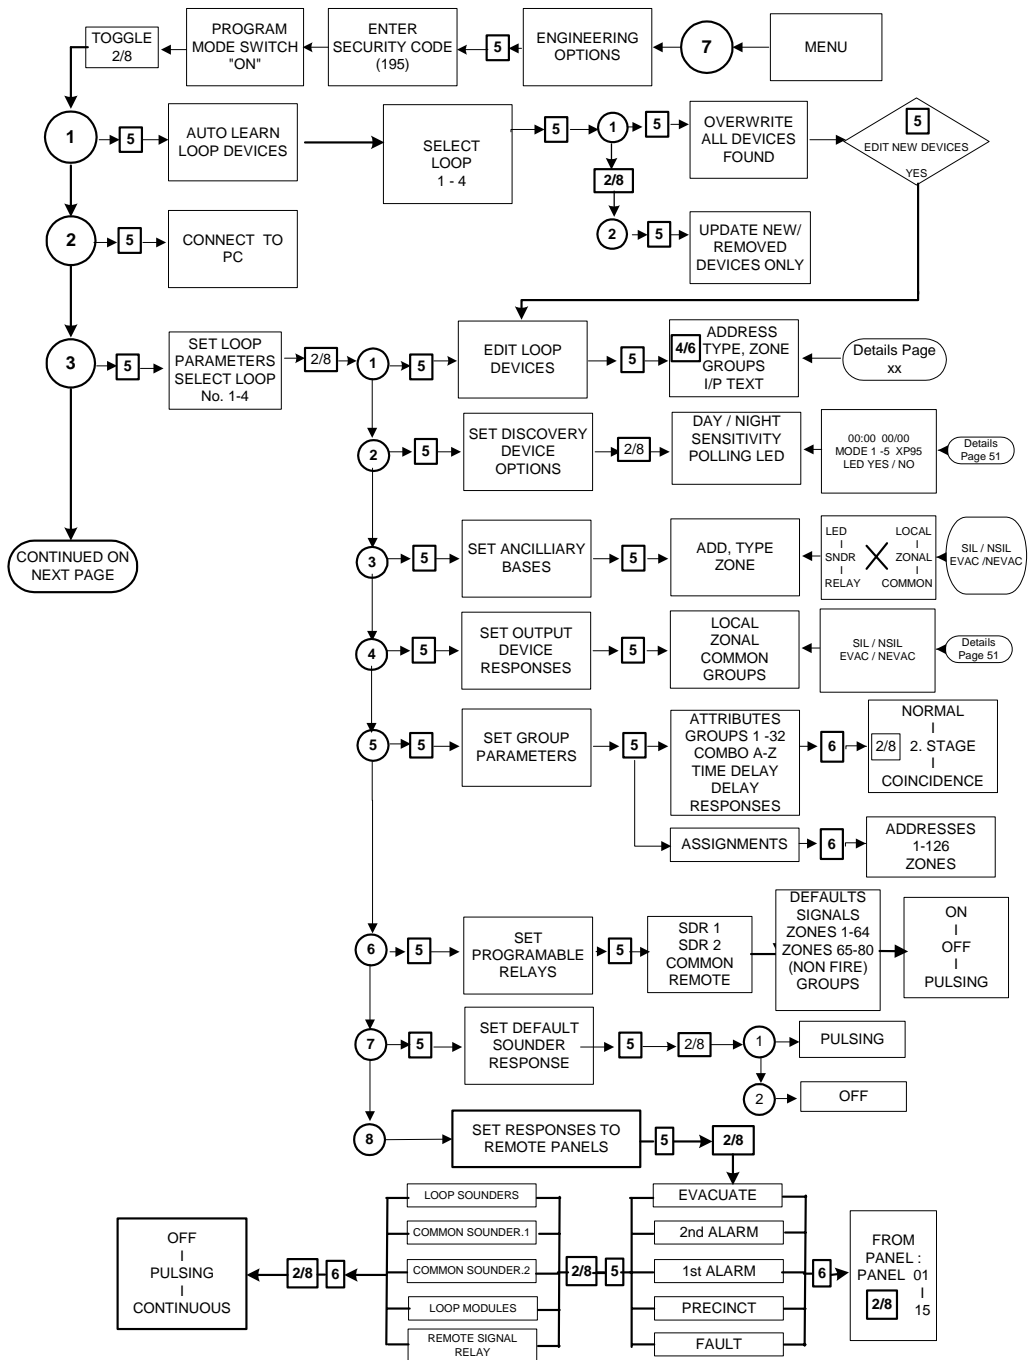

MENU AND CONTROL FUNCTIONS (Continued)

Set Disablements.

1. Remote Contacts can be disabled or enabled for test purposes. This applies to the signal relay, the common fire, common fault or the loop module relays.
2. Sounders can be disabled if required and enabled again.
3. The Loop can be isolated on this option.
4. Any selected zone can be disabled or enabled.
5. Any of up to 126 devices on the loop can be disabled or enabled.
6. Timers can be set for devices or outputs, to be re-enabled automatically at a specified time and date with this option.
7. All disablements, on whatever device or line, can be cleared simultaneously

MENU AND CONTROL FUNCTIONS (Continued)

Engineering Options.

In order to access the Engineering options a security code is needed which is normally restricted to engineering personnel only.

All the details of the Engineering Options and the options that allow the system to be re-configured with the relevant flow charts can be found in the Installation and Commissioning Manual.

SYSTEM OPERATION

Fire alarm.

During normal operation the only active indication on the control panel is the green Supply Healthy LED. The LCD shows the system normal message and the time and date. The backlight is off.

The control keyswitch should be in the OFF position and the key should be removed and stored in a secure place, readily available when required.

If a manual call point is activated, or an automatic detector senses smoke or heat, a fire alarm signal is generated and the following occurs:

- 1 The alarm sounders operate in accordance with the programmed configuration. This is normally a general evacuation (continuous) alarm throughout the building, but may be an alert (intermittent) signal, or alarm in certain parts of the building only.
- 2 The common FIRE LED flashes on the front panel.
- 3 The relevant zone LED flashes (1-64).
- 4 The LCD illuminates and shows the event information.
- 5 The internal buzzer pulses rapidly.
- 6 The remote contacts operate and signal the fire brigade (if this has been configured in the system).
- 7 Remote control functions are initiated in accordance with the program, e.g. doors closed, ventilation shutdown, etc.
- 8 Event details are printed (assuming a printer is fitted)

The actions to be taken in the event of a fire alarm should be fully documented and implemented immediately upon hearing the alarm.

After the event, note the event details, i.e. the activated zone and the device details if not already determined.

SYSTEM OPERATION (continued)

Silencing the alarm

Before the alarm sounders can be silenced, or any other control function activated, the CONTROLS keyswitch must be set to the ON position by inserting the key and turning it clockwise a quarter of a turn.

With the controls enabled, press the SILENCE/RESOUND ALARMS keypad button once:-

- 1 The alarm sounders on the system are silenced.
- 2 The LCD will illuminate to indicate the current status.
- 3 The flashing common fire and zone LEDs change to steady.
- 4 The buzzer tone changes to an intermittent bleep.
- 5 The LCD continues to show the event information.

NOTE : If another device is activated, the sounders are re-energised and the new event information is displayed.

If there are multiple events on the system, the information for each event may be viewed by using the toggle function with keypad buttons 2/8.

The 'MORE' LED is illuminated if there are other events. The LCD shows the total number of events.

Resounding the alarm

If, having silenced the sounders, it is necessary to reactivate them, e.g. because there are still personnel within the building, press the SILENCE/RESOUND ALARMS keypad button again.

Resetting the system

To restore the system to normal operation after a fire alarm it is necessary to reset the control panel by pressing the RESET button. (Key 9 on keypad)

All the LEDs illuminate for 3 -4 seconds (lamptest function) following which the panel reverts to its normal mode.

NOTE :

- 1 It is not possible to reset the system until the alarms have been silenced.
- 2 The system will not reset if the cause of the alarm is still present, i.e. broken glass in call point or smoke/heat in the vicinity of a detector.

SYSTEM OPERATION (continued)

Evacuate

The EVACUATE button, keypad **3** may be operated at any time to activate the alarm sounders.

The CONTROLS keyswitch must be in the ON position.

Press the EVACUATE button once:

The sounders are energised and the common FIRE LED will flash.

To turn the Evacuate signal off:

Press the SILENCE button, keypad **6** (This will be displayed on the LCD and the flashing 'FIRE' LED will change to steady).

Press RESET, keypad **9**

Panel buzzer

The internal panel buzzer operates whenever an abnormal event is on the system. It operates in the following modes:

Fire/Evacuate	Fast pulse.
Fault	Slow pulse.
Disablement	Double pulse.
Silenced	Intermittent bleep.

Monitoring

The control panel internal circuitry is fully supervised in accordance with the requirements of EN54-2-1998 and indicates a failure as a fault condition. Loop and sounder circuits are monitored for open circuit and short circuit fault conditions. Essential fuses are monitored.

SYSTEM OPERATION (continued)

Fault conditions

When the control panel detects a fault condition one of the following occurs:

1. The **COMMON FAULT** led will flash and the LCD will show the details.
2. The **PRE-ALARM** led will flash. This indicates that a detector has recorded a higher than normal analogue value which could signal a possible fault with that detector, or an impending fire condition. The LCD will show the details.
3. The **SYSTEM FAULT** led will flash, indicating that the processor has halted. This can only be reset by an engineer.
4. The **ALARM FAULT** led illuminates to indicate a fault on the alarm circuit.
5. The **PSU** led, when lit, indicates a power supply failure. The LCD will show the details
6. For each of the above or combination of them, the internal buzzer pulses (slow pulse)
7. The LCD will display the event information, e.g.

NO RESPONSE	ZONE 001	01 OF 01
TYPE MAN	ADD 003	18:20 23/03

The fault message is normally self-explanatory, for instance, in the above example the message is **NO RESPONSE** indicating that the panel cannot communicate with the device **A003**, which could indicate that it had been removed. The fault condition can be accepted by pressing the **SILENCE** key. **6**. To view the text description of the device press keypad **5**

The flashing LEDs go steady and the buzzer tone changes to an intermittent bleep. The panel automatically returns to normal operation when the fault condition clears; however, certain faults, e.g. **SYSTEM FAULT**, require the CPU to be reset.

SYSTEM OPERATION (continued)

The following list describes the typical fault messages. Any fault that does not have a logical explanation should be immediately reported.

WARNING : High voltages are present within the panel which could cause fatal shock. The front door should only be opened by a competent engineer. There are no user serviceable parts inside the panel.

IF IN DOUBT - CALL AN ENGINEER

Fault messages.

The following events are detected and reported :-

Message	Fault Condition
No response	Device removed
Type error	Device fault/wrong device type installed
Loop open circuit.	Loop circuit open.
Loop short circuit.....	Loop circuit short.
Power supply fault.	PSU failed.
Sounder short/open	Open/short circuit on sounder circuit
Mains fail	Mains failed
Battery fault	Battery disconnected (max 30s delay)
Earth fault	Earth fault
Double Resp(onse)	Duplicate address
CPU Fault	CPU failed
Network	Communications failure
Charger fault.....	PSU failure (External only).
Voltage fault.....	28 Volts outside spec.(<22V, >30V)
Device fault.....	Analogue value low.
Warning—Prog switch “on”.....	SW 2 on DIL switch set to ‘ON’

SYSTEM OPERATION (continued)

Action after a Fire

The following actions are in compliance with EN54-2

The responsible person should ensure that the following work is carried out as soon as possible after any fire, and that normal use of the area is not resumed until the work is complete.

- a) If the system includes detectors containing radioactive material (ionisation type), then special precautions may be required and the servicing company should be consulted.
- b) Each device which may have been affected by the fire should be tested.
- c) Each fire alarm sounder should be tested.
- d) A visual examination should be made of areas which might have been damaged by the fire, including power supplies, control equipment and interconnections.
- e) Any defect found should be recorded in the log book and immediate action taken to rectify the defect.
- f) The servicing company should be advised and instructed to carry out a check of the system.

The responsible person should also ensure that the following work is carried out, although this can take place after normal working has resumed.

- a) A check should be made of the state of the battery (ies) and charger.
- b) The servicing company should be instructed to carry out a full inspection and test of the system to verify its operation. This may include cables which are buried and areas that may be hidden.
- c) If the fire was not detected by the system, or the response was unacceptably slow, then the reasons for this should be investigated and a report obtained. Consideration should be given to modifying or upgrading the system if necessary.

On completion of the work a certificate should be obtained.

SYSTEM OPERATION (continued)

Action after a false Alarm.

Any alarm from the system should be treated as an alarm of fire until it can be proved to be false. False alarms can lead to a loss of confidence in the system and the responsible person should take steps to minimise the risk of such occurrences.

There are prescribed levels for the rate of false alarms and if this level is exceeded the responsible person must instigate special attention to resolve the problem. The average number of false alarms from an installation should not exceed one false alarm per year for each 25 detectors.

The following actions should be taken following a false alarm:-

- a) Where possible, identify the device which has initiated the alarm.
- b) Do not attempt to reset the system before establishing the cause.
- c) Record the event in the log book and inform the servicing company.

Action following a Fault.

If a fault is indicated on the system then the responsible person should ensure that the following actions are taken:-

- a) Determine the area affected by the fault and decide whether special action (such as fire patrols) are needed in that area.
- b) If possible, determine the reason for the fault, or note the activities in the area immediately prior to the fault occurring.
- c) Record the fault in the log book and advise the servicing company.

SYSTEM OPERATION (continued)

Avoiding false Alarms

Generally, false alarms are avoided by good system design and a properly designed system should provide troublefree service for many years. However; changes can occur in the layout of a building or the uses to which it is put which can affect the reliability of the system.

An awareness of the type of situation which can cause false alarms to be generated may prevent the effectiveness of the system being jeopardised.

Typical problem areas are as follows:-

Manual call points

MCPs do not normally cause problems unless they are sited where they can be inadvertently damaged, e.g. by fork lift trucks or trolleys, etc. One cause of false alarms from call points is malicious damage, i.e. vandalism which can occur if they are in an area accessible to the public.

Detectors

Probably the largest single cause of false alarms, smoke detectors can be susceptible to a number of factors in addition to smoke. Careful siting eliminates most of the problems but smoke detectors can be activated by any of the following:-

- a) Insects - can affect systems at certain times of the year and are more of a problem in some parts of the country. Detector manufacturers have long been aware of the problem and have introduced more sophisticated measures to eliminate them.
- b) Cooking - a common cause of false alarms is people cooking especially in bedrooms and mess rooms where toasters and similar appliances are often used.
- c) Air currents - draughts from open windows and air flows from ventilation systems or air conditioning units can activate detectors.
- d) Smoking - can activate detectors but is usually easily resolved by eliminating smoking in the immediate area.
- e) Steam/fumes - Steam from kitchens and laundries and fumes from vehicles, industrial processes, etc. can all cause unwanted alarms.
- f) Heat detectors are obviously affected by any form of heat and care should be taken with the siting of heating appliances in the vicinity of detectors.

SYSTEM INFORMATION

Date installed

Installed by

Maintained by

Number of zones used

Number of manual call points

Number of ionisation detectors

Number of optical detectors

Number of heat detectors

Number of short circuit isolators

Number of input/output devices

Number of sounders.....

Alarm operation, e.g. general, 2 stage, etc.

Number of repeaters

Auxiliary functions (specify)

.....

.....

Remote link - Central station details

Name

Contact

Tel.

Code/Id

FIRE PROCEDURES

In accordance with BS 5839 Part 1: 1988, written procedures should be produced for dealing with alarms of fire, fault warnings, and the isolation of any part of the system. The responsible person should ensure that users of the system are instructed in its proper use and are familiar with the procedures.

On hearing the fire alarm:-

CARRY OUT THE PRESCRIBED PROCEDURE

Subsequent action will depend on the circumstances and may include silencing the audible alarms and resetting the system as described later.

To evacuate the premises:-

Insert the control panel key into the CONTROLS key switch and turn clockwise to the ON position.

Press the EVACUATE pushbutton.

To cancel the **Evacuate** signal, refer to the **Silencing** section under **Operation**.

Fault Indication:-

If the control panel indicates a System Fault condition, make a note of all illuminated indicators.

Normal hours:-

Telephone no.

Contact

Out of hours:-

Telephone no.

Contact

LOG BOOK

It is recommended that this log book is maintained by a responsible executive who should ensure that every event is properly recorded. An event includes fire alarms (whether real or false), faults, tests, dates of temporary disconnection or isolation, and the dates of service and maintenance visits with a brief note of work carried out or outstanding.

Site name

.....

Address

.....

.....

.....

Responsible person

..... Date

..... Date

..... Date

Service contact

..... Tel

..... Tel

ROUTINE TESTING

In order to ensure that the system is fully operational, and to comply with the requirements of BS 5839 Part 1: 1988, the following routine attention is recommended:-

DAILY ATTENTION BY THE USER.

A check should be made every day to ascertain the following :-

- a) That either the panel indicates normal operation, or if not, that any fault indicated is recorded in the log book and that fault tracing actions have been taken.
- b) That any fault warning recorded the previous day has received attention. If any connection to the public fire brigade or other remotely manned centre is not continuously monitored then it should be tested daily in accordance with the supplier's instructions.

NOTE : On one day each week the daily test will be incorporated in the weekly test.

WEEKLY ATTENTION BY THE USER.

The following tests should be made every week to ensure that the system is capable of operating under alarm conditions :-

- a) At least one detector or call point on one zone should be operated to test the ability of the control and indicating equipment to receive a signal and to sound the alarm and operate any other warning devices. Each circuit should be tested in turn; if there are more than 13 zones then more than one zone may need to be tested in any week so that the interval between tests on one circuit does not exceed 13 weeks. It is preferable that each time a particular circuit is tested a different trigger device is used. An entry should be made in the log book quoting the particular trigger device that has been used to initiate the test. If operation of the alarm sounders has been prevented by disconnection then a further test should be carried out to prove the final reinstatement of the sounders, and, if permissible, of the alarm transmission circuits.
- b) If the batteries are open or accessible, a visual examination of the battery and its connections should be made to ensure that they are in good condition. Action should be taken to remedy any defect, including low electrolyte level.
- c) The fuel, oil, and coolant levels of any standby generator should be checked and topped up as necessary.
- d) Any printer should be checked to ensure that its reserves of paper, ink or ribbon are adequate for at least 2 weeks normal usage.

Any defect should be recorded in the log book and reported to the responsible person, and action should be taken to correct it.

ROUTINE TESTING (CONTINUED)

MONTHLY ATTENTION BY THE USER

If an automatically started emergency generator is used as part of the standby supply, then it should be started up once each month by a simulation of a failure of the normal power supply, and allowed to energise the fire alarm supply for a continuous period of at least 1 hour. The fire alarm system should be monitored to identify any malfunctioning caused by the use of the generator. At the end of the test period the normal supply should be restored and the charging arrangements for the starting battery checked for proper functioning. The fuel tanks should be left filled and the oil and coolant levels topped up as necessary.

NOTE : Frequent starting of the generator followed by a few minutes on-load is not recommended. It is important that when the engine is running, the generator is loaded to at least 50% of the engine's capacity to prevent sooting up with resultant loss of performance.

QUARTERLY INSPECTION AND TEST

The responsible person should ensure that every 3 months the following checks are carried out by a competent person.

- a) Entries in the log book should be checked and any necessary action taken.
- b) Batteries and their connections should be examined and tested as specified by the supplier to ensure that they are in good serviceable condition and not likely to fail before the next quarterly inspection.
- c) Where applicable, secondary batteries should be examined to ensure that the specific gravity of electrolyte in each cell is correct. Any necessary remedial action should be taken.
- d) Primary batteries, including reserves, should be tested to verify that they are satisfactory for a further period of use by taking measurements that are indicative of the conditions of each cell e.g. its voltage on a known and very high rate of discharge. The test conditions and the significance of the readings will depend on the type of cell and the use to which it is being put. These should be clearly specified by the supplier or commissioning company and applied with care. Primary batteries should in any case be replaced within the period of shelf life stipulated by the battery manufacturer. The alarm functions of the control and indicating equipment should be checked by the operation of a detector or call point in each zone. The operation of the alarm sounders and any link to a remote operated centre should be tested where practical. All fault indicators and their circuits should be checked, preferably by simulation of fault conditions. The control and indicating equipment should be visually inspected for signs of moisture ingress and other deterioration.

ROUTINE TESTING (CONTINUED)

ANNUAL INSPECTION AND TEST

The responsible person should ensure that, in addition to the quarterly checks, each device on the system is tested and that a visual inspection is made of the cable fittings and equipment.

NOTE : The control panel case may be cleaned periodically by wiping with a soft, damp cloth. Do not use any solvents.

TECHNICAL SPECIFICATION

Electrical Specification.

Mains supply	90 vac - 264 vac 47 - 63Hz	
Mains supply fuse	3.15 Amp (F3.15A H250V)	Replace only with similar type
Power supply rating	3 amps total inc battery charge 28V ± 2V	
Maximum ripple	250 millivolts.	
Battery type	Two 12 volt sealed lead acid (7Ah maximum)	
Battery charge voltage	27.6 vdc nominal.	Temperature compensated
Battery charge current	0.7A max	
Max current drawn from batteries.	3 Amps	With mains power source disconnected.
Dedicated sounder outputs.	24V fused at 500mA. 2 per loop	1.6 Amp total load over all circuits.
Fault relay contact rating.	30 Vdc 1 Amp maximum for each.	Maximum ratings not to be exceeded.
Remote fire relay contact rating.	30 Vdc 1 Amp maximum for each.	Maximum ratings not to be exceeded.
Terminal capacity	0.5 mm ² to 2.5 mm ² solid or stranded wire.	
Number of devices per loop.	126	Dependant on type.
Number of sounders per circuit.	Dependant on type and current consumption.	
Sounder circuit end of line.	4K7 5% ¼ Watt resistor.	Supplied in terminals.
Number of sounder outputs.	2 per loop	
SIL, AL, FLT, RST inputs.	Switched -ve, max resistance 100 Ohms	
Cabling	FP200 or equivalent (maximum capacitance 1µF, maximum inductance 1 millihenry)	Metal cable glands must be used.

TECHNICAL SPECIFICATION (continued)

General Specification.

VECTOR	
Enclosure	Steel IP 30.
Dimensions. H x W x D mm	310 x 460 x 85.mm
Weight.	6.22 Kg 1 loop 6.5Kg 4 loop
Temperature	0° to 45°C
Cable Entries. (20mm knockouts)	14 x top, 6 x top rear, 4 x bottom.
Number of Fire Zones	16, 32 or 64
Number of Loops	Up to 4 loops
Loop Current	500 mA max. per loop
Protocols	Apollo: S90, XP95, Discovery, Explorer.
Open Collector Outputs	6 x 30V Dc, 100mA (max)
Auxiliary Supply Output	2 x 28V DC, 1 Amp.
Event Log	100 Event.